
## INSTALLATION MANUAL FOR

## **SPRITZ**

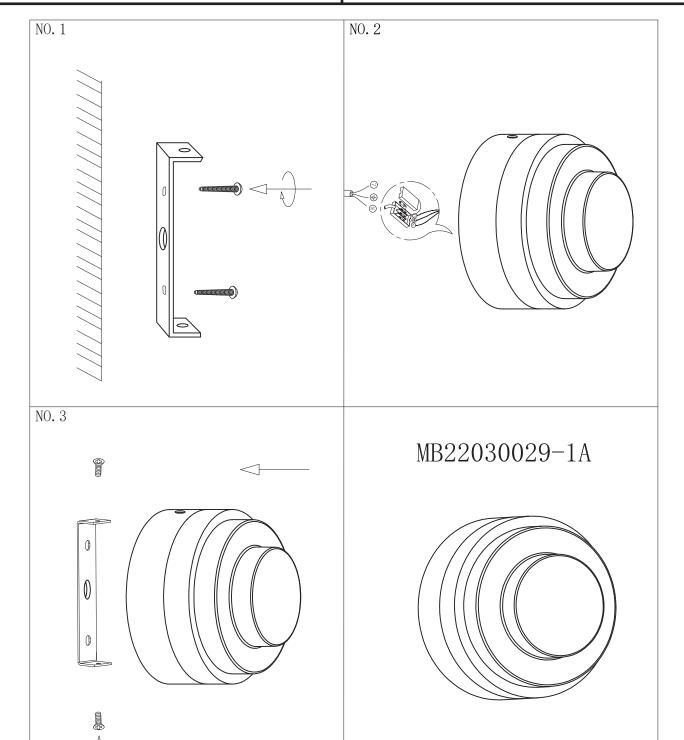



- 1. This light fitting operates at a normal supply voltage of 200-240V.
  2. If the extenal flexible cable of the lamp is damaged, it shall be
- exclusively replaced by the manufacturer through his service agent or a similar qualified person in order to avoid hazard.