


Connect the main power to "L"
and "N" terminal block.
Fix the ceiling pan.

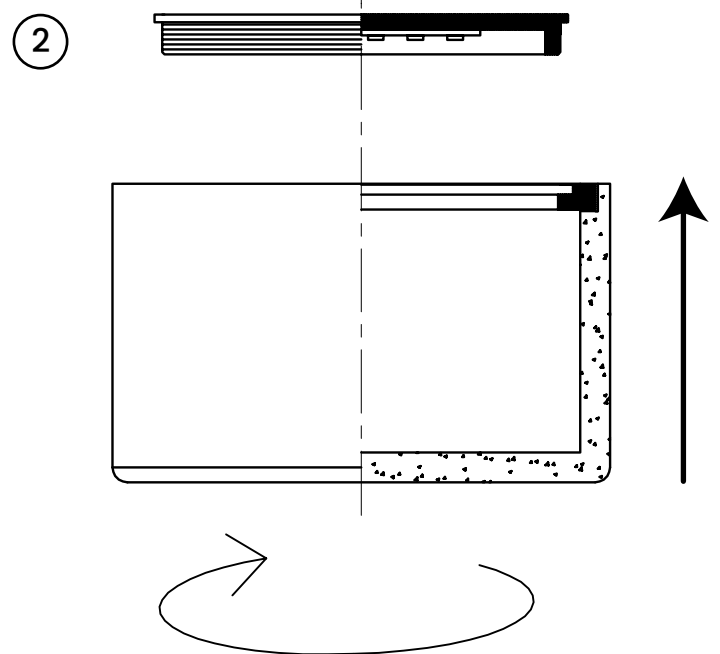

Install the acrylic shade and power on.